



⚠ WARNING

1. Read all instructions for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not stand on the VersaHaul.
4. Do not ride any vehicle while loading onto the VersaHaul.
5. Always store the VersaHaul carrier in a safe place.
6. Never exceed vehicle tongue weight ratings.
7. Only use VersaHaul with Class 2, 3, or 4 hitch. Most Class 3 hitches limit the VersaHaul to 500 lbs. total hauling capacity.
8. Improper use, storage or installation of carrier could result in death or serious injury.
9. Do not put any VersaHaul on a 5th wheel trailer or any other kind of trailer.
10. **VH-MS carrying capacity is limited to 500 lbs. max. Your vehicle suspension and hitch may limit the hauling capacity of the carrier.** For more information on vehicles and hauling capacities, visit www.versahaul.com.

The Limited Warranty on the VersaHaul Carrier.

BNK, INC warrants the carrier and related components. This warranty applies to any part found to be defective due to material and/or workmanship when inspected at the factory of BNK, Inc., Winamac, IN. BNK Inc. will, at its option, repair or replace defective parts to the original purchaser at no charge other than transportation. Sale receipt as proof of date of purchase is required, which will be returned. BNK, Inc. assumes no liability for labor charges made in performance of this warranty.

The warranty periods are as follows from date of purchase:

CARRIER FOR 1 YEAR. VOID IF: frame is broken or bent due to abuse. example: (underside scraped abusively)

ALL WARRANTIES ARE VOID IF: the carrier has been rented, used under abnormal conditions, or subjected to abuse, misuse, neglect, or improper maintenance.

All warranties should be handled at point of purchase unless other arrangements are made.

BNK, Inc. is not liable for any damage claim or liability claim, personal or otherwise resulting from operation of this carrier in any way. All transportation charges for items returned for warranty evaluation and/or replacement are to be borne by the customer.

For one (1) year from the date of purchase, BNK, Inc. will repair or replace for the original purchaser, without charge, any part or parts are manufactured by BNK, Inc. and found, upon examination at our factory in Winamac, to be defective in materials and/or workmanship.

All transportation charges on parts submitted for replacement under this warranty must be borne by the purchaser. This warranty does not apply to parts not manufactured by BNK, Inc. Their manufacturer may warrant these items. This warranty does not apply to any part which has been damaged by accident, alteration, abuse, improper adjustment, normal wear, or any other cause beyond our control.

Use of replacement parts other than genuine BNK, Inc. parts may impair the safety of your machine and void this warranty.

IMPORTANT

THIS WARRANTY IS VOID UNLESS THE PRODUCT REGISTRATION CARD IS FILLED OUT COMPLETELY AND RETURNED TO THE FACTORY AT WINAMAC, IN. WITHIN TEN (10) DAYS OF PURCHASE.


OUR WARRANTY COVERS OUR PRODUCT FOR ONE YEAR. WE ARE NOT ABLE TO EXCHANGE USED VERSAHAUL CARRIERS FOR REFUNDS OR NEW CARRIERS.



ATTACHING YOUR VERSAHAUL

To attach the assembled VersaHaul to your class III receiver, first place the Anti-Tilt Lock Bracket as shown on the Gear (over the Sleeve). Be sure the flat side of the Anti-Tilt Lock is facing the carrier. Insert the Sleeve and Gear into your receiver. Insert a hitch pin and on the opposite side insert a hair pin. Push the Anti-Tilt Lock Bracket all the way against the receiver then tighten all three 3/8" x 1 1/4" hex head screws with the 3/8" Socket. On a class II receiver, insert the Main Tube into the receiver after removing the Sleeve, and do not use the Anti-Tilt Lock Bracket. Insert a hitch pin and on the opposite side insert a hair pin.

Step 1

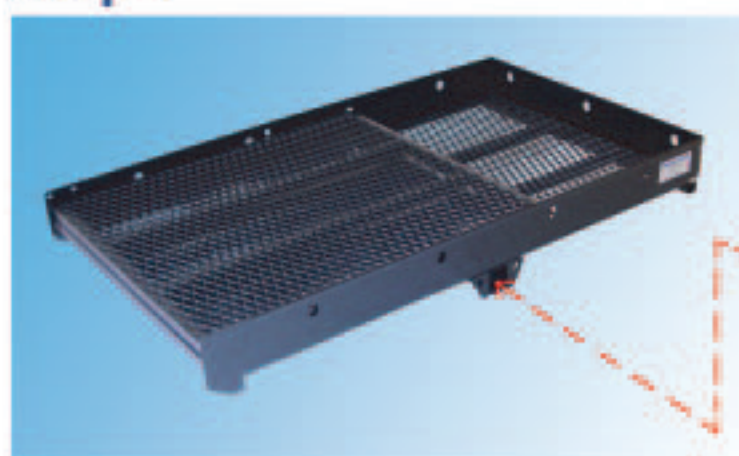


The Sleeve can be removed for use with a Class II receiver.

Insert the Gear and Plunger into the carrier rack. Guide the Plunger through the end of the carrier tube.

Step 2



Step 3

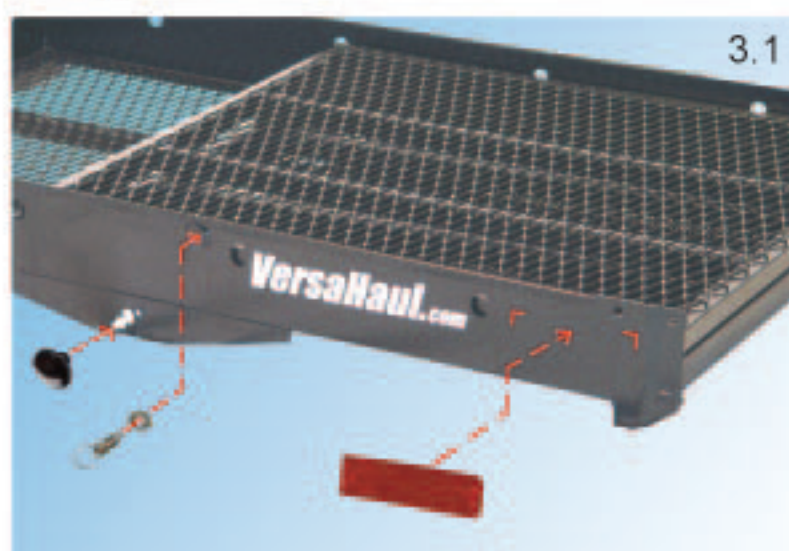

3.1

Screw the Knob on the end of the Plunger. Secure Knob by tightening the Spring Pull Pin Nut against the knob. Screw the Spring Pull Pin into the Spring Pull Pin Nut. Screw the Spring Pull Pin into the side of the carrier (Figure 3.1). Turn the Spring Pull Pin to desired depth (Figure 3.2). Tighten the Nut to secure pin adjustment (Figure 3.3).



3.2




3.3

Step 4

Screw the Spring Pull Pins into Spring Pull Pin Nuts. Screw Spring Pull Pins into the Ramp Bracket. Bolt the Ramp Bracket to the frame. Secure with Nuts and Lock Washers. **Note: To prevent loosening of the Spring Pull Pin, torque the Spring Pull Pin Nut tightly against the Ramp Bracket (Figure 4.1).**



4.2

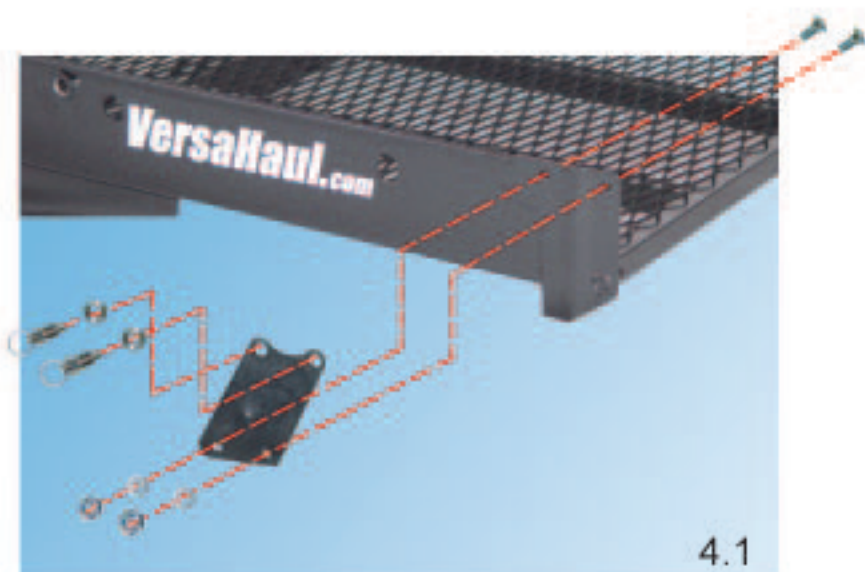

4.1

Assembled VH-MS



Note: the Ramp is being held in the upright position by the Spring Pull Pins on the Ramp Bracket.

Remove Reflector backing and affix Reflectors as shown.

VH-MS carrier in use.



The VH-MS features multiple locking positions with the Ramp folded down into the Carrier Tray. Pull the Knob and move to desired position.



PARTS

	Carrier Tray VH014		VH-MS Ramp VH042		Gear VH023A		Sleeve VH023B		Plunger VH023C		Knob VH320
	Ramp Bracket VH063		Threaded Spring Pull Pin x3 VH310		Spring Pull Pin Nut x3 VH300		1/4" x 2 3/4" Bolt VH250		1/2" Lock Nut VH243		1/2" Nut x2 VH240
	1/4" Nut x2 VH223		Carriage Bolt x2 1/4" x 3/4" Bolt VH226		Carrier Bolts x4 3/8" x 3/4" Bolt VH232		1/2" x 2 3/4" Bolt x2 VH241		1/2" Jamnut VH242		1/2" x 3/4" Leveling Bolt
	1/4" Lock Washer x2 VH222		Handle VH330		Handle Screw x2 1/2" x 1/4" Phillips Pan M.S. VH330		Anti Tilt Lock Bracket VH070		Reflectors x2 VH080		

NOTE: VersaHaul is attached using a standard Hitch Pin (not included). Also, some parts on your VH-MS will come pre-assembled.

TOOLS

